


User reference guide

Daikin Altherma – Low temperature split

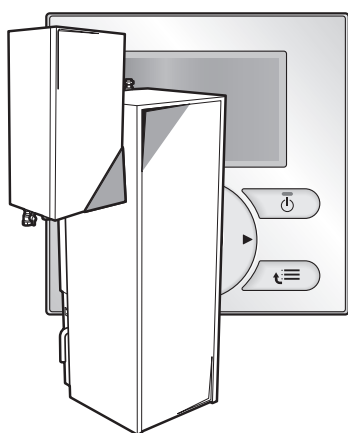

EHBH04CB
EHBH08CB
EHBH11CB
EHBH16CB
EBHX04CB
EBHX08CB
EBHX11CB
EBHX16CB

EHVH04S18CB
EHVH08S18CB
EHVH08S26CB
EHVH11S18CB
EHVH11S26CB
EHVH16S18CB
EHVH16S26CB
EHVX04S18CB
EHVX08S18CB
EHVX08S26CB
EHVX11S18CB
EHVX11S26CB
EHVX16S18CB
EHVX16S26CB

Table of contents

1	General safety precautions	2
1.1	About the documentation	2
1.1.1	Meaning of warnings and symbols	2
1.2	For the user	3
2	About this document	3
3	About the system	4
3.1	Components in a typical system layout	4
4	Operation	4
4.1	Overview: Operation	4
4.2	The user interface at a glance	4
4.2.1	Buttons	4
4.2.2	Status icons	5
4.3	Basic usage	5
4.3.1	Using home pages	5
4.3.2	Using the menu structure	5
4.3.3	Turning ON/OFF controls	5
4.4	Space heating/cooling control	6
4.4.1	About space heating/cooling control	6
4.4.2	Setting the space operation mode	6
4.4.3	Determining which temperature control you are using	7
4.4.4	Room thermostat control - About room thermostat control	7
4.4.5	Room thermostat control - Using the room temperature home page	8
4.4.6	Room thermostat control - Using the leaving water temperature home pages	9
4.4.7	Leaving water temperature control - About leaving water temperature control	10
4.4.8	Leaving water temperature control - Using leaving water temperature control according to a schedule	10
4.4.9	Leaving water temperature control - Using leaving water temperature control NOT according to a schedule	11
4.4.10	External room thermostat control - About external room thermostat control	11
4.4.11	External room thermostat control - Using external room thermostat control	11
4.5	Domestic hot water control	11
4.5.1	About domestic hot water control	11
4.5.2	Reheat mode	11
4.5.3	Scheduled mode	12
4.5.4	Scheduled + reheat mode	13
4.5.5	Using the DHW tank temperature home page	13
4.5.6	Using the DHW tank booster mode	13
4.6	Advanced usage	14
4.6.1	About changing the user permission level	14
4.6.2	Using quiet mode	14
4.6.3	Using holiday mode	14
4.6.4	Reading out information	16
4.6.5	Configuring date, time, units of measurement, contrast and backlight	16
4.6.6	Configuring user profile and home pages	16
4.6.7	Locking and unlocking buttons and functions	16
4.7	Preset values and schedules	17
4.7.1	Using preset values	17
4.7.2	Using and programming schedules	17
4.7.3	Schedules: Example	18
4.7.4	Predefined schedules: Room temperature + leaving water temperature (main)	18
4.7.5	Predefined schedules: Leaving water temperature (additional)	18
4.7.6	Predefined schedules: DHW tank temperature	19
4.8	Weather dependent operation	19
4.8.1	To set the weather dependent settings	19





4.9	Menu structure: Overview user settings	20
4.10	Installer settings: Tables to be filled in by installer	21
4.10.1	Quick wizard	21
4.10.2	Space heating/cooling control	21
4.10.3	Domestic hot water control [A.4]	21
4.10.4	Contact/helpdesk number [6.3.2]	21
5	Setting the energy prices	21
5.1	To set the fuel price	21
5.2	To set the electricity price	22
5.3	To set the electricity price schedule timer	22
5.4	About energy prices in case of an incentive per kWh renewable energy	22
5.4.1	To set the fuel price in case of an incentive per kWh renewable energy	22
5.4.2	To set the electricity price in case of an incentive per kWh renewable energy	22
5.4.3	Example	22
6	Energy saving tips	22
7	Maintenance and service	23
7.1	Overview: Maintenance and service	23
7.2	To find the contact/helpdesk number	23
8	Troubleshooting	23
8.1	Overview: Troubleshooting	23
8.2	To check the error history	23
8.3	To check the warning history	23
8.4	Symptom: You are feeling too cold (hot) in your living room	23
8.5	Symptom: The water at the tap is too cold	24
8.6	Symptom: Heat pump failure	24
9	Relocation	24
9.1	Overview: Relocation	24
10	Disposal	24
11	Glossary	24






1 General safety precautions




1.1 About the documentation

- The original documentation is written in English. All other languages are translations.
- The precautions described in this document cover very important topics, follow them carefully.
- The installation of the system, and all activities described in the installation manual and the installer reference guide must be performed by an authorized installer.

1.1.1 Meaning of warnings and symbols


	DANGER Indicates a situation that results in death or serious injury.
	DANGER: RISK OF ELECTROCUTION Indicates a situation that could result in electrocution.
	DANGER: RISK OF BURNING Indicates a situation that could result in burning because of extreme hot or cold temperatures.
	DANGER: RISK OF EXPLOSION Indicates a situation that could result in explosion.


	WARNING Indicates a situation that could result in death or serious injury.
	WARNING: FLAMMABLE MATERIAL
	CAUTION Indicates a situation that could result in minor or moderate injury.
	NOTICE Indicates a situation that could result in equipment or property damage.
	INFORMATION Indicates useful tips or additional information.

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.

1.2 For the user

- If you are not sure how to operate the unit, contact your installer.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

	WARNING To prevent electric shocks or fire: <ul style="list-style-type: none"> ▪ Do NOT rinse the unit. ▪ Do NOT operate the unit with wet hands. ▪ Do NOT place any objects containing water on the unit.
---	---

	NOTICE <ul style="list-style-type: none"> ▪ Do NOT place any objects or equipment on top of the unit. ▪ Do NOT sit, climb or stand on the unit.
---	--

- Units are marked with the following symbol:



This means that electrical and electronic products may not be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, of oil and of other parts must be done by an authorized installer and must comply with applicable legislation. Units must be treated at a specialized treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

- Batteries are marked with the following symbol:



This means that the batteries may not be mixed with unsorted household waste. If a chemical symbol is printed beneath the symbol, this chemical symbol means that the battery contains a heavy metal above a certain concentration.

Possible chemical symbols are: Pb: lead (>0.004%).

Waste batteries must be treated at a specialized treatment facility for reuse. By ensuring waste batteries are disposed of correctly, you will help to prevent potential negative consequences for the environment and human health.

2 About this document

Thank you for purchasing this product. Please:

- Read the documentation carefully before operating the user interface to ensure the best possible performance.
- Request the installer to inform you about the settings that he used to configure your system. Check if he has filled in the installer settings tables. If not, request him to do so.
- Keep the documentation for future reference.

Target audience

End users

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you must read before operating your system
 - Format: Paper (in the box of the indoor unit)
- **Operation manual:**
 - Quick guide for basic usage
 - Format: Paper (in the box of the indoor unit)
- **User reference guide:**
 - Detailed step-by-step instructions and background information for basic and advanced usage
 - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your installer.

The original documentation is written in English. All other languages are translations.

Available screens

Depending on your system layout and installer configuration, not all screens in this document may be available on your user interface.

Breadcrumbs

7.4.1.1	Room temperature	1
Comfort (heating)	20.0°C	>
Eco (heating)	18.0°C	>
Comfort (cooling)	22.0°C	>
Eco (cooling)	24.0°C	>
OK Select		◆ Scroll

Breadcrumbs help you to locate where you are in the menu structure of the user interface. This document also mentions these breadcrumbs.

3 About the system


Example: Go to [7.4.1.1]: > User settings > Preset values > Room temperature > Comfort (heating)

3 About the system

Depending on the system layout, the system can:

- Heat up a space
- Cool down a space (if a heating/cooling heat pump model is installed)
- Produce domestic hot water (if a DHW tank is installed)

3.1 Components in a typical system layout

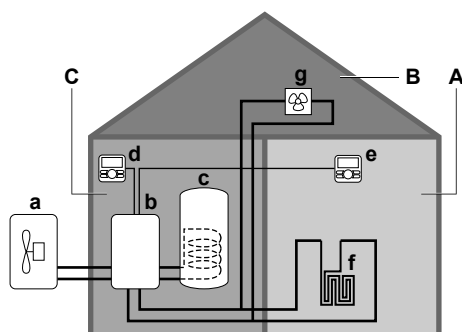

- A** Main zone. **Example:** Living room.
B Additional zone. **Example:** Bedroom.
C Technical room. **Example:** Garage.
a Outdoor unit heat pump
b Indoor unit heat pump
c Domestic hot water (DHW) tank
d User interface at the indoor unit
e User interface in the living room, used as room thermostat
f Underfloor heating
g Heat pump convectors or fan coil units


INFORMATION

The indoor unit and the domestic hot water tank (if installed) can be separated or integrated depending on the indoor unit type.

Part	Description
Domestic hot water control	How to control domestic hot water: <ul style="list-style-type: none"> ▪ Reheat mode ▪ Scheduled mode ▪ Scheduled + reheat mode
Advanced usage	Information about: <ul style="list-style-type: none"> ▪ Quiet mode ▪ Holiday mode ▪ Reading out information ▪ Date, time, units of measurement, contrast and backlight ▪ User profile and home pages ▪ Locking and unlocking buttons and functions
Preset values and schedules	<ul style="list-style-type: none"> ▪ How to use preset values ▪ How to select and program schedules ▪ Overview of predefined schedules
Menu structure	Overview of menu structure
Installer settings table	Overview of installer settings

4.2 The user interface at a glance

4.2.1 Buttons

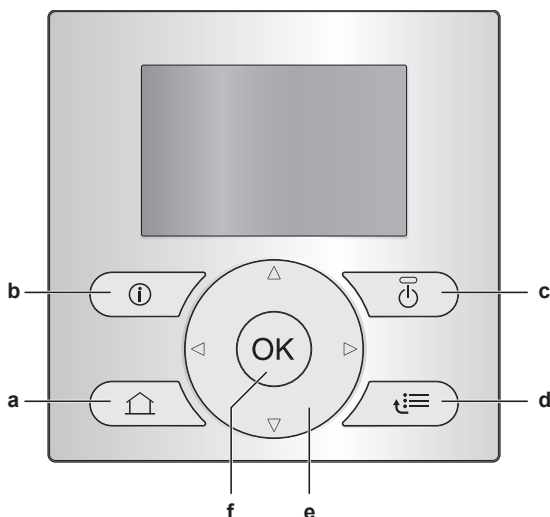

- a** **HOME PAGES**
- Switches between home pages (when you are on a home page).
 - Goes to the default home page (when you are in the menu structure).
- b** **MALFUNCTION INFORMATION**
- If a malfunction occurs, is displayed on the home pages. Press to display more information about the malfunction.
- c** **ON/OFF**
- Turns ON or OFF one of the controls (room temperature, leaving water temperature, DHW tank temperature).
- d** **MENU STRUCTURE/BACK**
- Opens the menu structure (when you are on a home page).
 - Goes up a level (when you are navigating through the menu structure).
 - Goes back 1 step (example: when you are programming a schedule in the menu structure).
- e** **NAVIGATING/CHANGING SETTINGS**

4 Operation

4.1 Overview: Operation

You can operate the system via the user interface. This part describes how to use the user interface:

Part	Description
At a glance	<ul style="list-style-type: none"> ▪ Buttons ▪ Status icons
Basic usage	Information about: <ul style="list-style-type: none"> ▪ Home pages, where you can read out and change settings that are meant for daily usage ▪ Menu structure, where you can read out and configure settings that are NOT meant for daily usage ▪ ON/OFF controls
Space heating/cooling control	How to control space heating/cooling: <ul style="list-style-type: none"> ▪ Setting the space operation mode ▪ Controlling the temperature

- Navigates the cursor on the display.
 - Navigates through the menu structure.
 - Changes settings.
 - Selects a mode.
- f OK
- Confirms a selection.
 - Enters a submenu in the menu structure.
 - Switches between displaying actual and desired values, or between displaying actual and offset values (if applicable) on the home pages.
 - Goes to the next step (when you are programming a schedule in the menu structure).
 - Enables you to activate or deactivate button lock if pressed for more than 5 seconds on a home page.
 - Enables you to activate or deactivate a function lock if pressed for more than 5 seconds in the main menu of the menu structure.



INFORMATION

If you press or while changing settings, the changes will NOT be applied.

4.2.2 Status icons

Icon	Description
	Space operation mode = Heating.
	Space operation mode = Cooling.
	Unit is operating.
	Desired room temperature = preset value (Comfort; daytime).
	Desired room temperature = preset value (Eco; nighttime).
	<ul style="list-style-type: none"> ▪ On the room temperature home page: Desired room temperature = according to the selected schedule. ▪ On the DHW tank temperature home page: DHW tank mode = Scheduled mode.
	DHW tank mode = Reheat mode.
	DHW tank mode = Scheduled + reheat mode.
	Domestic hot water operation.
	Actual temperature.
	Desired temperature.
	At the next scheduled action, the desired temperature will increase.
	At the next scheduled action, the desired temperature will NOT change.
	At the next scheduled action, the desired temperature will decrease.
	The preset value (Comfort or Eco) or scheduled value is temporarily overruled.
	The DHW tank booster mode is active or ready to be activated.
	Quiet mode is active.
	Holiday mode is active or ready to be activated.
	Button lock mode and/or function lock mode is active.
	An external heat source is active. Example: Gas burner.
	The disinfection mode is active.
	A malfunction occurred. Press to display more information about the malfunction.

Icon	Description
	Weather-dependent mode is active.
	User permission level = Installer.
	Defrost/oil return mode is active.
	Hot start mode is active.
	Emergency operation is active.

4.3 Basic usage

4.3.1 Using home pages

About home pages

You can use the home pages to read out and change settings that are meant for daily usage. What you can see and do on the home pages is described where applicable. Depending on your system layout, the following home pages may be possible:

- Room temperature (Room)
- Main leaving water temperature (LWT main)
- Additional leaving water temperature (LWT add)
- DHW tank temperature (Tank)

To go to a home page

- 1 Press .
- Result:** One of the home pages is displayed.
- 2 Press again to display the next home page (if any).

4.3.2 Using the menu structure

About the menu structure

You can use the menu structure to read out and configure settings that are NOT meant for daily usage. What you can see and do in the menu structure is described where applicable. For an overview of the menu structure, see "4.9 Menu structure: Overview user settings" on page 20.

To go to the menu structure

- 1 From a home page, press .

Result: The menu structure is displayed.

	1
Set time/date	>
Holiday	>
Quiet mode	Auto >
Operation mode	Heating >
Select schedules	
Information	
OK Select	Scroll

To navigate in the menu structure

Use , , , , and .

4.3.3 Turning ON/OFF controls

About turning ON/OFF controls

Before you can control...	You have to turn ON...
Room temperature	Room temperature control (Room)


4 Operation

Before you can control...	You have to turn ON...
Main (+ additional) leaving water temperature	Main (+ additional) leaving water temperature control (LWT main and LWT add) Main and additional leaving water temperature control are always turned ON or OFF together.
DHW tank temperature	Domestic hot water control (Tank)


If you turn ON...	Then...
Room temperature control	Main (+ additional) leaving water temperature control is automatically turned ON.
Main (+ additional) leaving water temperature control	Room temperature control is NOT automatically turned ON.

If you turn OFF...	Then...
Room temperature control	Main (+ additional) leaving water temperature control is NOT automatically turned OFF.
Main (+ additional) leaving water temperature control	Room temperature control is automatically turned OFF.


To check if a control is turned ON or OFF

- Go to the home page of the control. **Example:** Room temperature home page (Room).
- Check if the LED is ON or OFF. **Note:** If the control is turned OFF, OFF is also displayed on the screen. 


To turn ON or OFF the room temperature control

- Go to the room temperature home page (Room).
- Press .

To turn ON or OFF the leaving water temperature (main + additional) control

- Go to one of the following the home pages:
 - Main leaving water temperature home page (LWT main)
 - Additional leaving water temperature home page (LWT add)
- Press .

To turn ON or OFF the domestic hot water control

- Go to the DHW tank temperature home page (Tank).
- Press .

4.4 Space heating/cooling control

4.4.1 About space heating/cooling control

Controlling space heating/cooling typically consists of the following stages:

- Setting the space operation mode
- Controlling the temperature

Depending on the system layout and installer configuration, you use a different temperature control:

- Room thermostat control (linked or NOT linked to leaving water temperature)
- Leaving water temperature control
- External room thermostat control

4.4.2 Setting the space operation mode

About space operation modes


Depending on your heat pump model, you have to tell the system which space operation mode to use: heating or cooling.

If a... heat pump model is installed	Then...
Heating/cooling	The system can heat up and cool down a space. You have to tell the system which space operation mode to use.
Heating only	The system can heat up a space, but NOT cool down a space. You do NOT have to tell the system which space operation mode to use.

To tell the system which space operation to use, you can do the following:





You can...	Location
Check which space operation mode is currently used .	Home pages: <ul style="list-style-type: none"> Room temperature Leaving water temperature (main + additional)
Set the space operation mode.	Menu structure
Restrict when automatic changeover is possible.	

To determine if a heating/cooling heat pump model is installed



- Press  to go to the menu structure.
- Check if [4] Operation mode is listed. If so, a heating/cooling heat pump model is installed.

To check which space operation mode is currently used

- Go to one of the following the home pages:
 - Room temperature home page (Room)
 - Main leaving water temperature home page (LWT main)
 - Additional leaving water temperature home page (LWT add)
- Check the status icon:

If you see...	Then...
	Operation mode = heating. Unit is NOT heating up your space. However, the DHW tank can be heating up.
	Operation mode = heating. Unit is heating up your space at this moment.
	Operation mode = cooling. Unit is NOT cooling down your space. However, the DHW tank can be heating up.
	Operation mode = cooling. Unit is cooling down your space at this moment.

To set the space operation mode

- Go to [4]:  > Operation mode.
- Select one of the following options and press .

If you select...	Then the space operation mode is...
Heating	Always heating mode.
Cooling	Always cooling mode.

If you select...	Then the space operation mode is...
Automatic	Automatically changed by the software based on the outdoor temperature (and depending on installer settings also the indoor temperature), and taking monthly restrictions into account. Note: Automatic changeover is only possible under certain conditions.

To restrict automatic changeover operation mode

Prerequisite: You switched the permission level to Advanced end user.

Prerequisite: You switched the space operation mode to automatic.

- Go to [7.5]: > User settings > Allowed operation mode.
- Select a month and press **OK**.
- Select Heating only, Cooling only or Heating/Cooling, and press **OK**.

Typical automatic changeover restrictions

When	Restriction
During cold season. Example: October, November, December, January, February and March.	Heating only
During warm season. Example: June, July and August.	Cooling only
In-between. Example: April, May and September.	Heating/Cooling

4.4.3 Determining which temperature control you are using

To determine which temperature control you are using (method 1)

Check the installer settings table filled in by the installer.

To determine which temperature control you are using (method 2)

If you have 2 user interfaces, perform the following procedure on the user interface at the indoor unit.

Prerequisite: You switched the permission level to Advanced end user.

- Press multiple times to switch between home pages, and check if the additional leaving water temperature home page (LWT add) is available:

If ...	Then you have...
Available	A main zone and an additional zone
NOT available	Only a main zone

Typical additional leaving water temperature home page:

User profile = Basic	User profile = Detailed

- Check the following:

If...	Then the temperature control is...	
	Main zone	Additional zone (if any)
Room temperature is listed under: [6.1]: > Information > Sensor information	Room thermostat control. Go to next step to check if leaving water set point and room temperature set point are linked.	External room thermostat control.
Thermostat main A is listed under: [6.5]: > Information > Actuators	External room thermostat control.	
Else	Leaving water temperature control.	

- Only for room thermostat control: Go to the main leaving water temperature home page (LWT main) and check the following:

Is displayed next to the set point?	Then leaving water set point and room temperature set point are...
Yes	NOT linked. You can set the leaving water set point on the home page.
No	Linked by their preset values. You can set the preset values in the menu structure.

4.4.4 Room thermostat control - About room thermostat control

Room thermostat control means that you control the following:

- Room temperature of the main zone
- Leaving water temperature of the main zone

Room temperature of the main zone

To control the room temperature of the main zone, you can do the following:

You can...	Location
Read out the actual and desired room temperature.	Room temperature home page
Temporarily overrule the room temperature schedule.	
Change the mode from scheduled to preset value. If you do this, you also have to define (in the menu structure):	Room temperature home page if user profile = Detailed
<ul style="list-style-type: none"> Preset values Overrule period (Temperature lock) 	
Select which room temperature schedule you want to use.	Menu structure
Program schedules.	
Define preset values that are used by the room temperature schedule, and when you change the mode from scheduled to preset value.	

See also:

- ["4.4.5 Room thermostat control - Using the room temperature home page" on page 8](#)
- ["To set the overrule period" on page 9](#)

4 Operation

- "4.7 Preset values and schedules" on page 17

Leaving water temperature of the main zone

To control the leaving water temperature of the main zone, you can do the following:

You can...	Location
Read out the desired leaving water temperature.	Leaving water temperature home page (main)
Adjust the leaving water temperature.	
Condition: Leaving water set point is NOT linked with the room temperature set point. Only change this if the desired room temperature cannot be reached.	
Define preset values.	Menu structure
Condition: Leaving water set point is linked with the room temperature set point. Only change this if the desired room temperature cannot be reached.	



See also:

- "4.4.6 Room thermostat control - Using the leaving water temperature home pages" on page 9
- "4.7 Preset values and schedules" on page 17

4.4.5 Room thermostat control - Using the room temperature home page

Typical room temperature home pages

Depending on the user profile, the user interface gives you either a basic or a detailed home page. To set the user profile, refer to "4.6.6 Configuring user profile and home pages" on page 16.

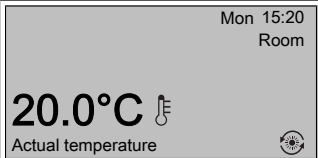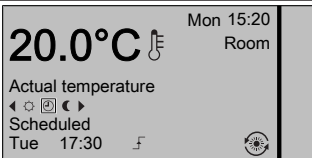User profile = Basic	User profile = Detailed
	

To read out the actual and desired room temperature

- 1 Go to the room temperature home page (Room).

Result: You can read out the actual temperature.

20.0°C
Actual temperature

- 2 Press **OK**.

Result: You can read out the desired temperature.

22.0°C
Desired temperature

To temporarily overrule the room temperature schedule

- 1 Go to the room temperature home page (Room).
- 2 Use **▲** or **▼** to adjust the temperature.

To change the mode from scheduled to preset value

Prerequisite: User profile = Detailed.

- 1 Go to the room temperature home page (Room).
- 2 Press **▲** or **▼** to select a preset value (○ or ◐).


Result: The mode will return to Scheduled according to the overrule period.

Example: Temporarily overruling the schedule AND changing the mode to preset value

You have configured the following settings:

Settings		Description
Preset values	Comfort (heating) = 20°C	Desired temperature when you are at home.
	Eco (heating) = 18°C	Desired temperature: <ul style="list-style-type: none">▪ When you are away▪ During the night
Schedule	07:00 Comfort	You are at home. Desired temperature = preset value (Comfort (heating)).
	09:00 Eco	You are away. Desired temperature = preset value (Eco (heating)).
	17:00 Comfort	You are at home. Desired temperature = preset value (Comfort (heating)).
	19:00 21°C	You are at home and want it to be a little warmer. Desired temperature = custom temperature.
	23:00 Eco	Desired temperature = preset value (Eco (heating)).
Overrule period (Temperature lock)	2 hours	If you temporarily overrule the schedule by a preset value, after 2 hours the schedule will be used again.

If user profile = Basic, then you can **temporarily overrule** the room temperature schedule by pressing **▲** or **▼**.

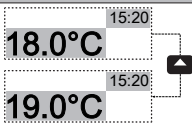Situation	Description
	15:20 => Scheduled temperature = preset value (Eco (heating)) = 18°C. You temporarily overrule the schedule. Desired temperature = custom temperature = 19°C. At the next scheduled action (17:00), the schedule will be used again.

If user profile = Detailed, then you can:

- **Temporarily overrule** the room temperature schedule by pressing **▲** or **▼** (same as if user profile = Basic)

- Change the mode from scheduled to a preset value by pressing or .

Situation	Description
	<p>Room temperature schedule is used.</p> <p>15:20 => Desired temperature = preset value (Eco (heating)) = 18°C.</p> <p>The next scheduled action is at 17:00 and the desired temperature will then increase.</p>
	<p>You temporarily overrule the schedule.</p> <p>Desired temperature = custom temperature = 19°C.</p> <p>At the next scheduled action (17:00), the schedule will be used again.</p>
	<p>You change the mode from scheduled to preset value (Comfort (heating)).</p> <p>Desired temperature = preset value (Comfort (heating)) = 20°C.</p> <p>After 2 hours, the schedule will be used again (17:20 => 20°C).</p>
	<p>Before you have changed the mode from scheduled to preset value, and now you temporarily overrule the preset value.</p> <p>Desired temperature = custom temperature = 21°C.</p> <p>After 2 hours, the schedule will be used again (17:20 => 20°C).</p>

To set the overrule period

Prerequisite: You switched the permission level to Advanced end user.

- Go to [7.2]: > User settings > Temperature lock.
- Select a value and press **OK**:
 - Permanent
 - hours (2, 4, 6, 8)

Usage example: You have a party

If you are in the following situation:

- You are using the following room temperature schedule:
 - 17:00 preset value (Comfort) = 20°C
 - 23:00 preset value (Eco) = 18°C
- Tonight you have a party and you want to use the preset value (Comfort) until 02:00.

Then you can do the following:

- Set the overrule period (Temperature lock) to 6 hours.
- At 20:00, go to the room temperature home page (Room).
- Press to select .

Result: The preset value (Comfort) will be used until 02:00. After that, the schedule will be used again.

Usage example: You go away for a couple of hours

If you are in the following situation:

- You are using the following room temperature schedule:
 - 08:00 preset value (Comfort) = 20°C
 - 23:00 preset value (Eco) = 18°C
- At 14:00, you go away for 3 hours.

Then you can do the following:

- Set the overrule period (Temperature lock) to 2 hours.
- Go to the room temperature home page (Room).
- Press to select .

Result: For the next 2 hours, the room will NOT be heated to the scheduled 20°C, but to the preset value (Eco = 18°C). After 2 hours, the room will heat up again to the scheduled 20°C.

Advantage:

You save energy because you do NOT heat the room unnecessary, and by the time you come home the room is warm again.

4.4.6 Room thermostat control - Using the leaving water temperature home pages



INFORMATION

The leaving water is the water that is sent to the heat emitters. The desired leaving water temperature is set by your installer in accordance with the heat emitter type.
Example: Underfloor heating is designed for lower leaving water temperature than radiators and heat pump convectors and/or fan coil units. You only have to adjust leaving water temperature settings in case of problems.

Typical leaving water temperature home pages

Main zone:

User profile = Basic	User profile = Detailed

Additional zone:

User profile = Basic	User profile = Detailed

To read out the desired leaving water temperature (main + additional)

Go to the leaving water temperature home page (LWT main or LWT add).

To adjust/overrule the leaving water temperature (NOT linked to room temperature setpoint)



INFORMATION

To see if the leaving water temperature setpoint is linked to the room temperature setpoint, see ["4.4.3 Determining which temperature control you are using"](#) on page 7.

4 Operation

To adjust the leaving water temperature (main)

- 1 Go to the main leaving water temperature home page (LWT main).

2 Press or to adjust. **Example:**

INFORMATION

In case of weather dependency, an offset value can be modified.

To adjust the leaving water temperature (additional)

- 1 Go to the additional leaving water temperature home page (LWT add).

2 Press or to adjust. **Example:**

INFORMATION

In case of weather dependency, an offset value can be modified.

To adjust/override the leaving water temperature (linked to room temperature setpoint)

INFORMATION

To see if the leaving water temperature setpoint is linked to the room temperature setpoint, see ["4.4.3 Determining which temperature control you are using" on page 7](#).

To set leaving water temperature preset values (main)

INFORMATION


You cannot adjust/override the leaving water temperature (main) for room thermostat control with linked leaving water temperatures. However if necessary, you can adjust the desired leaving water temperature (main) by adjusting preset values.

INFORMATION

Adjusting the leaving water temperature is permanent unless the leaving water temperature is according to a schedule. In that case the overruling is valid until the next scheduled action.

- 1 Go to [7.4.2]: > User settings > Preset values > LWT main.
- 2 Set the Preset values according to following graph.

Example: Room thermostat comfort temperature will correspond with leaving water comfort temperature.

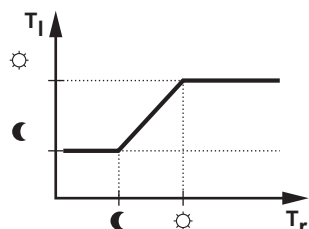

- T_r : Room temperature
 - T_l : Leaving water temperature
- 3 Press or to adjust/override.

To adjust the leaving water temperature (additional)

- 1 Go to the additional leaving water temperature home page (LWT add).

2 Press or to adjust. **Example:**

INFORMATION

In case of weather dependency, an offset value can be modified.

4.4.7 Leaving water temperature control - About leaving water temperature control

Leaving water temperature control means that you only control the leaving water temperature. To control the leaving water temperature, you can do the following:

You can...	Location
Read out the desired leaving water temperature (main + additional).	Leaving water temperature home pages (main + additional)
▪ Adjust/override the leaving water temperature (main).	
▪ Adjust the leaving water temperature (additional).	
Select which leaving water temperature schedule (main + additional) you want to use.	Menu structure
Program leaving water temperature schedule (main + additional).	
Define preset values that are used by the leaving water temperature schedule (main).	

See also:

- ["4.4.6 Room thermostat control - Using the leaving water temperature home pages" on page 9](#)
- ["4.7 Preset values and schedules" on page 17](#)

4.4.8 Leaving water temperature control - Using leaving water temperature control according to a schedule

To set leaving water temperature preset values (main)

INFORMATION

Adjusting the leaving water temperature is permanent unless the leaving water temperature is according to a schedule. In that case the overruling is valid until the next scheduled action.

- 1 Go to [7.4.2]: > User settings > Preset values > LWT main.

2 Press or to adjust. **Example:**

To adjust the leaving water temperature (additional)

- 1 Go to the additional leaving water temperature home page (LWT add).

2 Press or to adjust. **Example:**

INFORMATION

In case of weather dependency, an offset value can be modified.

4.4.9 Leaving water temperature control - Using leaving water temperature control NOT according to a schedule

To adjust the leaving water temperature (main)

- 1 Go to the main leaving water temperature home page (LWT main).

2 Press or to adjust. Example:

To adjust the leaving water temperature (additional)

- 1 Go to the additional leaving water temperature home page (LWT add).

2 Press or to adjust. Example:



INFORMATION

In case of weather dependency, an offset value can be modified.

4.4.10 External room thermostat control - About external room thermostat control

External room thermostat control means that you control the following:

- Room temperature on the external thermostat control
- Leaving water temperature on the user interface (Daikin)

To control the leaving water temperature, you can do the following:

You can...	Location
Read out the desired leaving water temperature.	Leaving water temperature home pages (main + additional)
Adjust the desired leaving water temperature.	
Only change this if the desired room temperature cannot be reached.	

See also: "4.4.6 Room thermostat control - Using the leaving water temperature home pages" on page 9

4.4.11 External room thermostat control - Using external room thermostat control

To adjust the leaving water temperature (main)

- 1 Go to the main leaving water temperature home page (LWT main).

2 Press or to adjust. Example:

To adjust the leaving water temperature (additional)

- 1 Go to the additional leaving water temperature home page (LWT add).

2 Press or to adjust. Example:



INFORMATION

In case of weather dependency, an offset value can be modified.

4.5 Domestic hot water control

4.5.1 About domestic hot water control

Depending on the DHW tank mode (installer setting), you use a different domestic hot water control:

- Reheat mode
- Scheduled mode
- Scheduled + reheat mode



CAUTION

The booster heater permission schedule is used to restrict or allow booster heater operation based on a weekly program. Advice: In order to avoid unsuccessful disinfection function, at least allow the booster heater (by the weekly program) for minimum 4 hours starting from the scheduled start-up of disinfection. If the booster heater is restricted during disinfection, this function will NOT be successful and the applicable warning AH will be generated.



INFORMATION

In case of error code AH and no interruption of the disinfection function occurred due to domestic hot water tapping, following actions are recommended:

- When the Domestic hot water > Type > Reheat or Reheat + sched. is selected, it is recommended to program the start-up of the disinfection function at least 4 hours later than the last expected large hot water tapping. This start-up can be set by installer settings (disinfection function).
- When the Domestic hot water > Type > Scheduled only is selected, it is recommended to program a Storage eco 3 hours before the scheduled start-up of the disinfection function to preheat the tank.

To determine which DHW tank mode you are using (method 1)

Check the installer settings table filled in by the installer.

To determine which DHW tank mode you are using (method 2)

Prerequisite: User profile = Detailed.


- 1 Go to the DHW tank temperature home page (Tank).
- 2 Check which icons are displayed:

If... is displayed	Then the DHW tank mode =...
	Reheat mode
	Scheduled mode
	Scheduled + reheat mode

4.5.2 Reheat mode

In reheat mode (☺), the DHW tank continuously heats up to the temperature shown on the DHW tank temperature home page (example: 50°C).

4 Operation

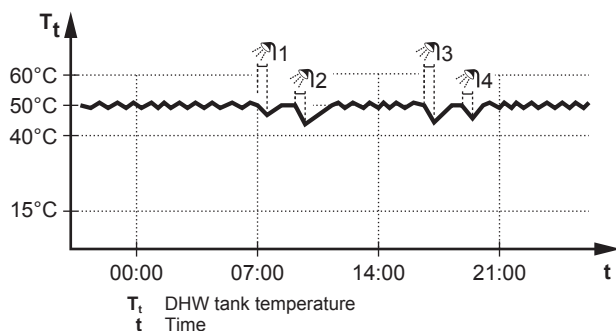

INFORMATION

There is a risk of space heating (cooling) capacity shortage/comfort problem (in case of frequent domestic hot water operation, frequent and long space heating/cooling interruption will happen) when selecting [6-0D]=0 ([A.4.1] Domestic hot water Type=Reheat only) in case of a domestic hot water tank without an internal booster heater.



INFORMATION

When the DHW tank mode is reheat, the risk for capacity shortage and comfort problem is significant. In case of frequent reheat operation, space heating/cooling function is regularly interrupted.

In reheat mode, you can do the following:

You can...	Location
Read out the desired reheat temperature .	DHW tank temperature home page
Adjust the reheat temperature . Condition: ♦ is displayed on the DHW tank temperature home page.	
Activate the DHW tank booster mode .	
(Only for EHBH/X) Program a booster heater allowance schedule to restrict when the booster heater can operate. Example: Only allow the booster heater to operate during the night.	Menu structure
(Only for field supplied domestic hot water pump for secondary return) Program a domestic hot water pump schedule to determine when to turn ON and OFF the pump. When turned ON, the pump runs and makes sure hot water is instantly available at the tap. To save energy, only turn ON the pump during periods of the day when instant hot water is necessary.	


See also:

- ["4.5.5 Using the DHW tank temperature home page" on page 13](#)
- ["4.5.6 Using the DHW tank booster mode" on page 13](#)
- ["4.7 Preset values and schedules" on page 17](#)

4.5.3 Scheduled mode

In scheduled mode (\odot), the DHW tank produces hot water corresponding to a schedule. The best time to allow the tank to produce hot water is at night, because the space heating demand is lower.

Example:

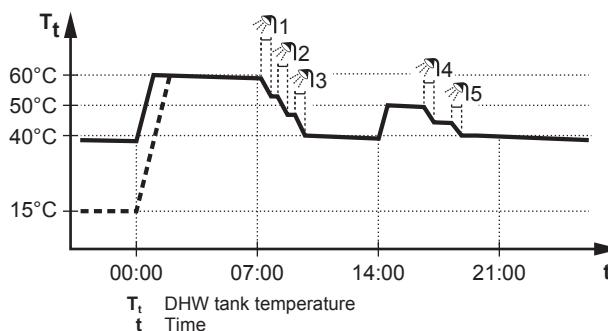

- Initially, the DHW tank temperature is the same as the temperature of the domestic water entering the DHW tank (example: 15°C).
- At 00:00 the DHW tank is programmed to heat up the water to a preset value (example: Storage comfort = 60°C).
- During the morning, you consume hot water and the DHW tank temperature decreases.
- At 14:00 the DHW tank is programmed to heat up the water to a preset value (example: Storage eco = 50°C). Hot water is available again.
- During the afternoon and evening, you consume hot water again and the DHW tank temperature decreases again.
- At 00:00 the next day, the cycle repeats.

In scheduled mode, you can do the following:

You can...	Location
Read out the active or next scheduled desired temperature .	DHW tank temperature home page
Override the active or next scheduled desired temperature .	
Condition: \blacklozenge is displayed on the DHW tank temperature home page.	
Activate the DHW tank booster mode .	Menu structure
Select a DHW tank temperature schedule .	
Program a DHW tank temperature schedule .	
Define preset values that are used by the DHW tank temperature schedule.	
(Only for EHBH/X)	
Program a booster heater allowance schedule to restrict when the booster heater can operate.	
Example: Only allow the booster heater to operate during the night.	
(Only for field supplied domestic hot water pump for secondary return)	
Program a domestic hot water pump schedule to determine when to turn ON and OFF the pump.	
When turned ON, the pump runs and makes sure hot water is instantly available at the tap. To save energy, only turn ON the pump during periods of the day when instant hot water is necessary.	


See also:

- ["4.5.5 Using the DHW tank temperature home page" on page 13](#)
- ["4.5.6 Using the DHW tank booster mode" on page 13](#)
- ["4.7 Preset values and schedules" on page 17](#)

4.5.4 Scheduled + reheat mode

In scheduled + reheat mode (☼ ☼), the domestic hot water control is the same as in scheduled mode. However, when the DHW tank temperature drops below a preset value (=reheat tank temperature – hysteresis value; example: 35°C), the DHW tank heats up until it reaches the reheat set point (example: 45°C). This ensures that a minimum amount of hot water is available at all times.

Example:

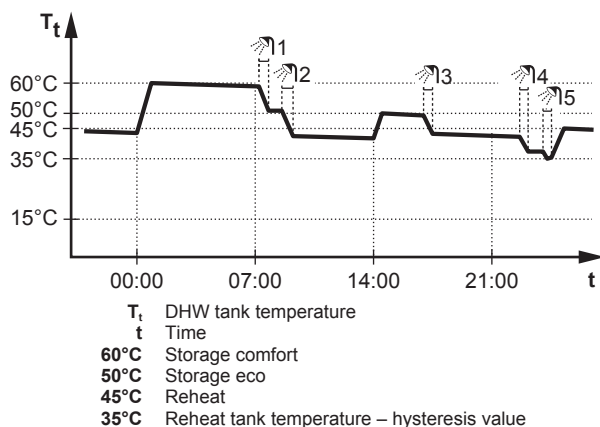

In scheduled + reheat mode, you can do the following:

You can...	Location
Do the same things as in scheduled mode.	—
Adjust the preset value (Reheat).	Menu structure

See also:

- "4.5.3 Scheduled mode" on page 12
- "4.7 Preset values and schedules" on page 17

4.5.5 Using the DHW tank temperature home page

Typical DHW tank temperature home pages

Depending on the user profile, the user interface gives you either a basic or a detailed home page. The examples in the illustrations below are in DHW tank mode = Scheduled.

User profile = Basic	User profile = Detailed

To read out and adjust the desired reheat temperature (in scheduled and reheat mode)

- Go to [7.4.3.3]: ☼ > User settings > Preset values > Tank temperature > Reheat.


Result: You can read out the desired reheat temperature.

- Press ☼ or ☼ to adjust.

To read out and overrule the active or next scheduled desired temperature (in scheduled mode or scheduled + reheat mode)

- Go to the DHW tank temperature home page (Tank).

Result: 60°C ☼ is displayed.

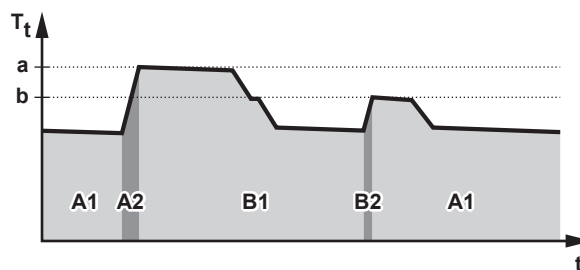

During period...	You can read out...
A1	The next scheduled action (a)
A2	The active action (a)
B1	The next scheduled action (b)
B2	The active action (b)

- Press ☼ or ☼ to overrule. **Note:** If the desired temperature is weather dependent, you cannot change it on the home page.

Usage example: You need more hot water than scheduled

If you are in the following situation:

- Current time = 10:30
- Next scheduled action of the DHW tank = Heat up to the preset value (Eco; example: 55°C and sufficient for 2 persons) at 14:00
- This evening you need hot water for 3 persons

Then you can do the following:

- Go to the DHW tank temperature home page (Tank).
- Overrule the next scheduled action by changing from 55°C to 60°C.

Advantages:

- You will have sufficient hot water (= comfortable).
- You do NOT have to change the schedule (= easy).
- You do NOT have to activate the DHW tank booster mode (= energy saving).

4.5.6 Using the DHW tank booster mode

About the DHW tank booster mode

You can use the DHW tank booster mode to immediately start heating up the water to the preset value (Storage comfort). However, this consumes extra energy.

To check if the DHW tank booster mode is active

- Go to the DHW tank temperature home page (Tank).
- Check the following:
 - In user profile = Basic: If ☼ is displayed, the DHW tank booster mode is active.
 - In user profile = Detailed: If ☼ is selected, the DHW tank booster mode is active.

To activate the DHW tank booster mode (user profile = Basic)

- Go to the DHW tank temperature home page (Tank).
- Press ☼ for more than 5 seconds.

To activate the DHW tank booster mode (user profile = Detailed)

- Go to the DHW tank temperature home page (Tank).
- Press ☼ to select ☼.

4 Operation

Usage example: You immediately need more hot water

If you are in the following situation:

- You already consumed most of your hot water.
- You cannot wait for the next scheduled action to heat up the DHW tank.

Then you can activate the DHW tank booster mode.

Advantage: The DHW tank immediately starts heating up the water to the preset value (Storage comfort).



INFORMATION

When the DHW tank booster mode is active, the risk of space heating/cooling and capacity shortage comfort problems is significant. In case of frequent domestic hot water operation, frequent and long space heating/cooling interruptions will happen.

4.6 Advanced usage

4.6.1 About changing the user permission level

The amount of information you can read out in the menu structure depends on your user permission level:

- End user (= default)
- Adv. end user: You can read out more information.

To set the user permission level to Advanced end user

- 1 Go to the main menu or any of its submenus:
- 2 Press for more than 4 seconds.

Result: The user permission level switches to Adv. end user. Additional information is displayed and "+" is added to the menu title. The user permission level will stay in Adv. end user until set otherwise.

To set the user permission level to End user

- 1 Press for more than 4 seconds.

Result: The user permission level switches to End user. The user interface will return to the default home screen.

4.6.2 Using quiet mode

About quiet mode

You can use quiet mode to decrease the sound of the outdoor unit. However, this also decreases the heating/cooling capacity of the system. There are multiple quiet mode levels.

You can:

- Completely deactivate quiet mode
- Manually activate a quiet mode level until the next scheduled action
- Use and program a quiet mode schedule

Possible quiet mode levels

- For EHBH/X04+08 + EHVH/X04+08

Level	Description
Level 1	Least quiet. At colder ambient conditions, reduced performance can occur.
Level 2	Medium quiet. Under all circumstances, reduced performance is possible.
Level 3	Most quiet. Under all circumstances, performance will be reduced.

- For EHBH/X11+16 + EHVH/X11+16

Level	Description
Level 1	Most quiet. Under all circumstances, performance will be reduced.

To check if quiet mode is active

- 1 Press to go to one of the home pages.
- 2 If is displayed, quiet mode is active.

To use quiet mode

Prerequisite: You switched the permission level to Advanced end user.

- 1 Go to [3]: > Quiet mode.
- 2 Do one of the following:

If you want to...	Then...
Completely deactivate quiet mode	Select Always OFF and press OK .
Manually activate a quiet mode level	<ul style="list-style-type: none">• Select On and press OK.• Go to [7.4.4]: > User settings > Preset values > Quiet level.• Select a level and press OK.
Use and program a quiet mode schedule	<ul style="list-style-type: none">• Select Automatic and press OK.• Program a schedule. See "4.7.2 Using and programming schedules" on page 17.

Usage example: Baby is sleeping in the afternoon

If you are in the following situation:

- You have programmed a quiet mode schedule:
 - During the night: Level 3 (= most quiet).
 - During the day: OFF to ensure the heating/cooling capacity of the system.
- However, during the afternoon the baby is sleeping and you want it to be quiet.

Then you can do the following:

Prerequisite: You switched the permission level to Advanced end user.

- 1 Go to [3]: > Quiet mode.
- 2 Select On and press **OK**.
- 3 Go to [7.4.4]: > User settings > Preset values > Quiet level.
- 4 Select Level 3 and press **OK**.

Advantage:

The outdoor unit runs in its most quiet level.

4.6.3 Using holiday mode

About holiday mode

During your holiday, you can use the holiday mode to deviate from your normal schedules without having to change them. You can only use holiday mode if temperature control = room thermostat control. See also ["4.4.3 Determining which temperature control you are using" on page 7](#).

Using holiday mode typically consists of the following stages:

- 1 Configuring the holiday for one of the following situations:

Situation	Then...
You stay at home during your holiday	You have to select a day: space heating/cooling will be according to the desired room temperature of the selected day.
You go away during your holiday	You have to configure space heating/cooling settings. <ul style="list-style-type: none"> Space heating/cooling will be according to these settings. Domestic hot water operation can be turned ON or OFF. If you decide to turn it OFF, disinfection mode will remain active.

2 Activating the holiday mode.

- If you do NOT activate, the configured holiday settings will NOT be used.
- If you activate:

Period	Then...
Before and after your holiday	Your normal schedules will be used.
During your holiday	The configured holiday settings will be used.

To check if holiday mode is activated and/or running

- Press to go to one of the home pages.
- Check the following:

If... is displayed	Then...
	One of the following holiday modes is activated: <ul style="list-style-type: none"> Holiday mode (Away) is activated, but NOT running yet. Holiday mode (Home) is activated. You cannot see if the holiday mode is already running.
	Holiday mode (Away) is activated and running.

To configure the holiday (when you stay at home)

Prerequisite: You switched the permission level to Advanced end user.

- Go to [2.2]: > Holiday > Holiday mode.
- Select Home.
- Configure the holiday mode settings (when you stay at home).
- Activate the holiday mode.

Possible holiday mode settings (when you stay at home)

Setting	Description
From and Until	First and last day of your holiday.
Use day schedule	Day schedule used during your holiday. Example: Saturday



INFORMATION

Switch to Adv. end user if you want to change the Use day schedule setting.

To configure the holiday (when you go away)

Prerequisite: You switched the permission level to Advanced end user.

- Go to [2.2]: > Holiday > Holiday mode.
- Select Leave.
- Configure the holiday mode settings (when you go away).
- Activate the holiday mode.

Possible holiday mode settings (when you go away)

Setting	Description
From and Until	First and last day of your holiday.
Operation mode	Operation mode used during your holiday.
Heating	Set point used during your holiday when the unit is operating in heating mode.
Cooling	Set point used during your holiday when the unit is operating in cooling mode.
DHW	Turn ON or OFF domestic hot water operation during your holiday.



INFORMATION

You can only change the From and Until settings in the End user level. For changing the other settings, you have to switch to Adv. end user level.

To activate or deactivate the holiday mode

Prerequisite: You have configured the holiday.

- Go to [2.1]: > Holiday > Holiday.
- Do one of the following:
 - To activate, select Yes and press **OK**.
 - To deactivate, select No and press **OK**.

Usage example: You go away during the winter

If you are in the following situation:

- In 2 days, you go away for 2 weeks during the winter.
- You want to save energy, but prevent your house from freezing.

Then you can do the following:

Prerequisite: You switched the permission level to Advanced end user.

- Configure the holiday. Go to [2]: > Holiday, and configure the following settings:

Setting	Value
Holiday mode	Away
From	2 February 2014
Until	16 February 2014
Operation mode	Heating
Heating	12°C

- Activate the holiday mode.
 - Go to [2.1]: > Holiday > Holiday.
 - Select Yes and press **OK**.

Advantage:

- Before and after your holiday, your normal schedule will be used.
- During your holiday, you save energy and prevent your house from freezing.

Usage example: You come home during your holiday

If you are in the following situation:

- You configured and activated the holiday mode (Away).

4 Operation

- During your holiday, you come home for a few hours and want to use your normal schedule.

Then you can do the following:

- Deactivate the holiday mode.
- When you go away again, activate the holiday mode again.

Advantage:

You do NOT have to change your schedule or holiday configuration.

4.6.4 Reading out information

To read out information

Prerequisite: You switched the permission level to Advanced end user.

- Go to [6]: > Information.

Possible read-out information

In menu...	You can read out...
[6.1] Sensor information	Room, tank or DHW, outside, and leaving water temperature. (If applicable)
[6.2] Energy metering	Produced energy, consumed electricity, and consumed gas.
[6.3] Error handling	Error history and contact/helpdesk number.
[6.4] User permission level	Current user permission level.
[6.5] Actuators	Status/mode of each actuator. Example: Domestic hot water pump ON/OFF.
[6.6] Operation modes	Current operation mode. Example: Defrost/oil return mode.
[6.7] Running hours	Running hours of the system.
[6.8] Version	Version information about the system.

4.6.5 Configuring date, time, units of measurement, contrast and backlight

To configure time and date

Prerequisite: You switched the permission level to Advanced end user.

- Go to [1]: > Set time/date.



INFORMATION

Switch to Adv. end user to change daylight saving time and 12/24h notation.

To configure units of measurement

Prerequisite: You switched the permission level to Advanced end user.

- Go to [7.6]: > User settings > Unit of measurement.

Possible units of measurement settings

Setting	Possible units of measurement
Decimal point	<ul style="list-style-type: none"> Dot Comma
Temperature	<ul style="list-style-type: none"> °C °F
Produced energy	<ul style="list-style-type: none"> kWh MBtu

Setting	Possible units of measurement
Flow	<ul style="list-style-type: none"> l/min GPM

To configure the contrast of the user interface

Prerequisite: You switched the permission level to Advanced end user.

- Go to [7.1.1]: > User settings > Display > Contrast.

To configure the backlit LCD time of the user interface

Prerequisite: You switched the permission level to Advanced end user.

- Go to [7.1.2]: > User settings > Display > Backlit LCD time.

4.6.6 Configuring user profile and home pages

To set a user profile

Prerequisite: You switched the permission level to Advanced end user.

- Go to [7.1.3]: > User settings > Display > User profile.
- Select a user profile and press **OK**.

Possible user profiles

If user profile = Detailed, you can see and do more on the home pages.

User profile = Basic	User profile = Detailed

To configure which home pages are made available to the end user

Prerequisite: You switched the permission level to Advanced end user.

- Go to [7.1.4]: > User settings > Display > Available home pages.
Result: The home pages that are possible for your system layout are listed.
- Select a home page and press **OK**.
- Do one of the following:
 - To display the home page, select Yes and press **OK**.
 - To hide the home page, select No and press **OK**.

4.6.7 Locking and unlocking buttons and functions

About locking and unlocking

You can use the following locking modes:

- Button lock: Locks all buttons to prevent children from changing settings.
- Function lock: Locks a specific function to prevent people from changing its settings.

Possible function locks

Lock	If active, people cannot...
Room On/OFF	Turn ON or OFF the room temperature control.
LWT On/OFF	Turn ON or OFF the leaving water temperature (main + additional) control.

Lock	If active, people cannot...
Tank On/OFF	Turn ON or OFF the domestic hot water control.
Temperature up/down	Adjust temperatures.
Quiet mode	Use quiet mode.
Holiday	Use holiday mode.
Operation mode	Set the space operation mode.
User settings	Change settings in [7]: > User settings.

To check if locking is active

- 1 Press to go to one of the home pages.
- 2 If is displayed, button lock is active.

Note: If you are on a home page and try to use a function that is locked, is displayed for 1 second.

To activate or deactivate button lock

- 1 Press to go to one of the home pages.
- 2 Press **OK** for more than 5 seconds.

To activate or deactivate a function lock

- 1 Press to go to the menu structure.
- 2 Press **OK** for more than 5 seconds.
- 3 Select a function and press **OK**.
- 4 Select Lock or Unlock, and press **OK**.

4.7 Preset values and schedules

4.7.1 Using preset values

About preset values

You can define preset values for multiple controls. Preset values make it easy to use the same value in many places (schedules and room temperature home page (and)). If you later want to change the value, you only have to do it in one place.

To define preset values

- 1 Go to [7.4]: > User settings > Preset values.
- 2 Select for which control you want to define a preset value.
Example: Room temperature.
- 3 Select a preset value and press **OK**. **Example:** Comfort (heating).
- 4 Select a temperature and press **OK**.

Possible preset values

Control	Preset value	Where used
Room temperature	Comfort	<ul style="list-style-type: none"> Room temperature schedules Room temperature home page (and) if user profile = Detailed
	Eco	
LWT main	Comfort	Main leaving water temperature schedules
	Eco	
Tank temperature	Storage comfort	DHW tank temperature schedule if DHW tank mode is
	Storage eco	
	Reheat	DHW tank temperature schedule if DHW tank mode = Scheduled + reheat

Control	Preset value	Where used
Quiet level		Used when quiet mode is set to On
Elec price	High	Only when the Bivalent setting is activated (installer setting).
	Medium	
	Low	
Fuel price		Only when the Bivalent setting is activated (installer setting).

4.7.2 Using and programming schedules

About schedules

Depending on your system layout and installer configuration, schedules (predefined and/or user-defined) for multiple controls may be available.

You can:

- Select which schedules you currently want to use.
- Program your own schedules if the predefined schedules are not satisfactory. The actions you can program are control specific.

Possible actions per control

Control	Possible actions
Room temperature	Program when to heat up or cool down a space: <ul style="list-style-type: none"> ▪ Comfort (preset value) ▪ Eco (preset value) ▪ [Custom temperature]
Main leaving water temperature	
Additional leaving water temperature	
(Only for EHVH/X and EHBH/X in combination with an optional domestic hot water tank)	Program when to heat up the DHW tank. The possible actions depend on an installer setting. Possible actions 1: <ul style="list-style-type: none"> ▪ Storage comfort (preset value)^(a) ▪ Storage eco (preset value)^(a) ▪ Storage stop^(b)
DHW tank temperature	
(Only for EHBH/X in combination with an optional domestic hot water tank)	
Booster heater allowance	Program when the booster heater can operate. Example: Only allow the booster heater to operate during the night.
Quiet mode	Program when the unit has to use which quiet mode level: <ul style="list-style-type: none"> ▪ Level 1 ▪ Level 2 ▪ Level 3 ▪ OFF
(Only for field supplied domestic hot water pump for secondary return)	Program when the domestic hot water pump is turned ON and OFF.
Domestic hot water pump	
Electricity price	Program when a certain electricity tariff is valid.

(a) Start heating up until the desired setpoint (Comfort/Eco) is reached.

4 Operation

- (b) Stop heating, even if the desired temperature is not reached yet; example: if electric tariffs are higher during the day, you can program a stop at 06:00.

To select which schedule you currently want to use

- Go to [5]: > Select schedules.
- Select for which control you want to use a schedule. **Example:** [5.1] Room temperature.
- Select for which operation mode you want to use a schedule. **Example:** [5.1.1] Heating.
- Select a predefined or user-defined schedule and press **OK**.

To program a schedule

- Go to [7.3]: > User settings > Set schedules.
- Open an empty, predefined or user-defined schedule.
- Change it.
- Save it.

Guidelines when programming

Set heating schedule	
Mon	07:00 Comfort
Delete line	
Clear day schedule	
Copy day	
Save schedule	
--:-- --	
OK Select	Scroll

You can:

- Delete lines from the schedule
- Clear a day schedule
- Copy from one day to others

Usage example: You work in a 3-shift system

If you work in a 3-shift system, you can do the following:

- Program 3 room temperature schedules in heating mode and give them appropriate names. **Example:** EarlyShift, DayShift and LateShift
- Select the schedule that you currently want to use.

4.7.3 Schedules: Example



INFORMATION

The procedures to program other schedules are similar.

In this example:

- Room temperature schedule in heating mode
- Monday = Tuesday = Wednesday = Thursday = Friday
- Saturday = Sunday

To program the schedule

- Go to [7.3.1.1]: > User settings > Set schedules > Room temp. > Set heating schedule.
- Select Empty and press **OK**.
- Program the schedule for Monday. See below for more details.
- Copy from Monday to Tuesday, Wednesday, Thursday and Friday. See below for more details.
- Program the schedule for Saturday.
- Copy from Saturday to Sunday.
- Save the schedule and give it a name. See below for more details.

To program the schedule for Monday

- Use and to select Monday.

- Press to enter the schedule for Monday.

- Program the schedule for Monday:

- Use and to select an entry.
- Use and to change the value of an entry.

To copy from one day to another

- Select the day from which you want to copy and press **OK**. **Example:** Monday.
- Select Copy day and press **OK**.
- Set the days you want to copy to Yes and press **OK**. **Example:** Tuesday = Yes, Wednesday = Yes, Thursday = Yes and Friday = Yes.

To save the schedule

- Press **OK**, select Save schedule and press **OK**.
- Select User defined 1, User defined 2 or User defined 3 and press **OK**.
- Change the name and press **OK**. (Only applicable for room temperature schedules). **Example:** MyWeekSchedule

4.7.4 Predefined schedules: Room temperature + leaving water temperature (main)


: Desired temperature = Preset value (Comfort)

: Desired temperature = Preset value (Eco)

Predefined 1



Predefined 2

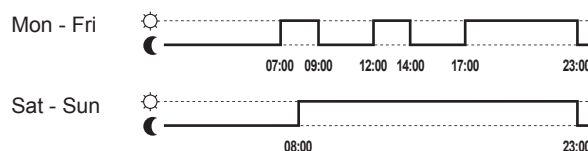

Predefined 3



INFORMATION

The predefined schedules are applicable for both heating and cooling operation.

4.7.5 Predefined schedules: Leaving water temperature (additional)

: Additional zone = On


: Additional zone = OFF

Predefined 1



Predefined 2**Predefined 3****INFORMATION**

The predefined schedules are applicable for both heating and cooling operation.



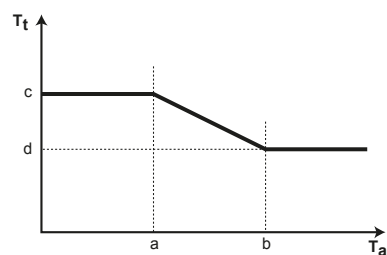
Set weather-dependent heating/Set weather-dependent cooling

- T_t Target leaving water temperature
- T_a Outdoor temperature
- a** Low outdoor ambient temperature
- b** High outdoor ambient temperature
- c** Desired leaving water temperature when the outdoor temperature equals or drops below the low ambient temperature. **Note:** in heating, this value should be higher than (d) as for low outdoor temperatures warmer water is required. In cooling, this value should be higher than (d) as for low outdoor temperatures less cold water suffices
- d** Desired leaving water temperature when the outdoor temperature equals or rises above the high ambient temperature. **Note:** in heating, this value should be lower than (c) as for high outdoor temperatures less warm water is required. In cooling, this value should be lower than (c) as for high outdoor temperatures colder water is required.

4.7.6 Predefined schedules: DHW tank temperature

a ↑: Start production of domestic hot water. Desired DHW tank temperature = Preset value (Storage comfort)

  b ↑: Start production of domestic hot water. Desired DHW tank temperature = Preset value (Storage eco)

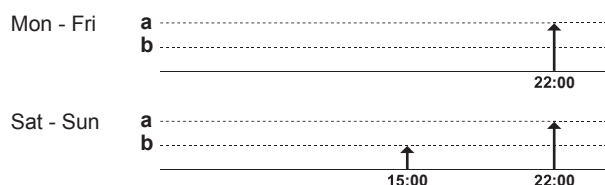Predefined 1**Predefined 2****Predefined 3****4.8 Weather dependent operation**

In space heating/cooling control, the leaving water temperature setpoint mode can be:

- Fixed
- Weather-dependent (the leaving water temperature is determined automatically depending on the outdoor temperature)

To select the setpoint mode, see the installer reference guide.

To set the parameters for the weather-dependent curve, see below.


4.8.1 To set the weather dependent settings

Prerequisite: You switched the permission level to Advanced end user.

- 1 Go to [7.7]: > User settings > Set weather dependent.
- 2 For main leaving water temperature zone [7.7.1], modify with , , , , and confirm with .
- 3 If applicable, for additional leaving water temperature zone [7.7.2], modify with , , , , and confirm with .

4 Operation

4.9 Menu structure: Overview user settings

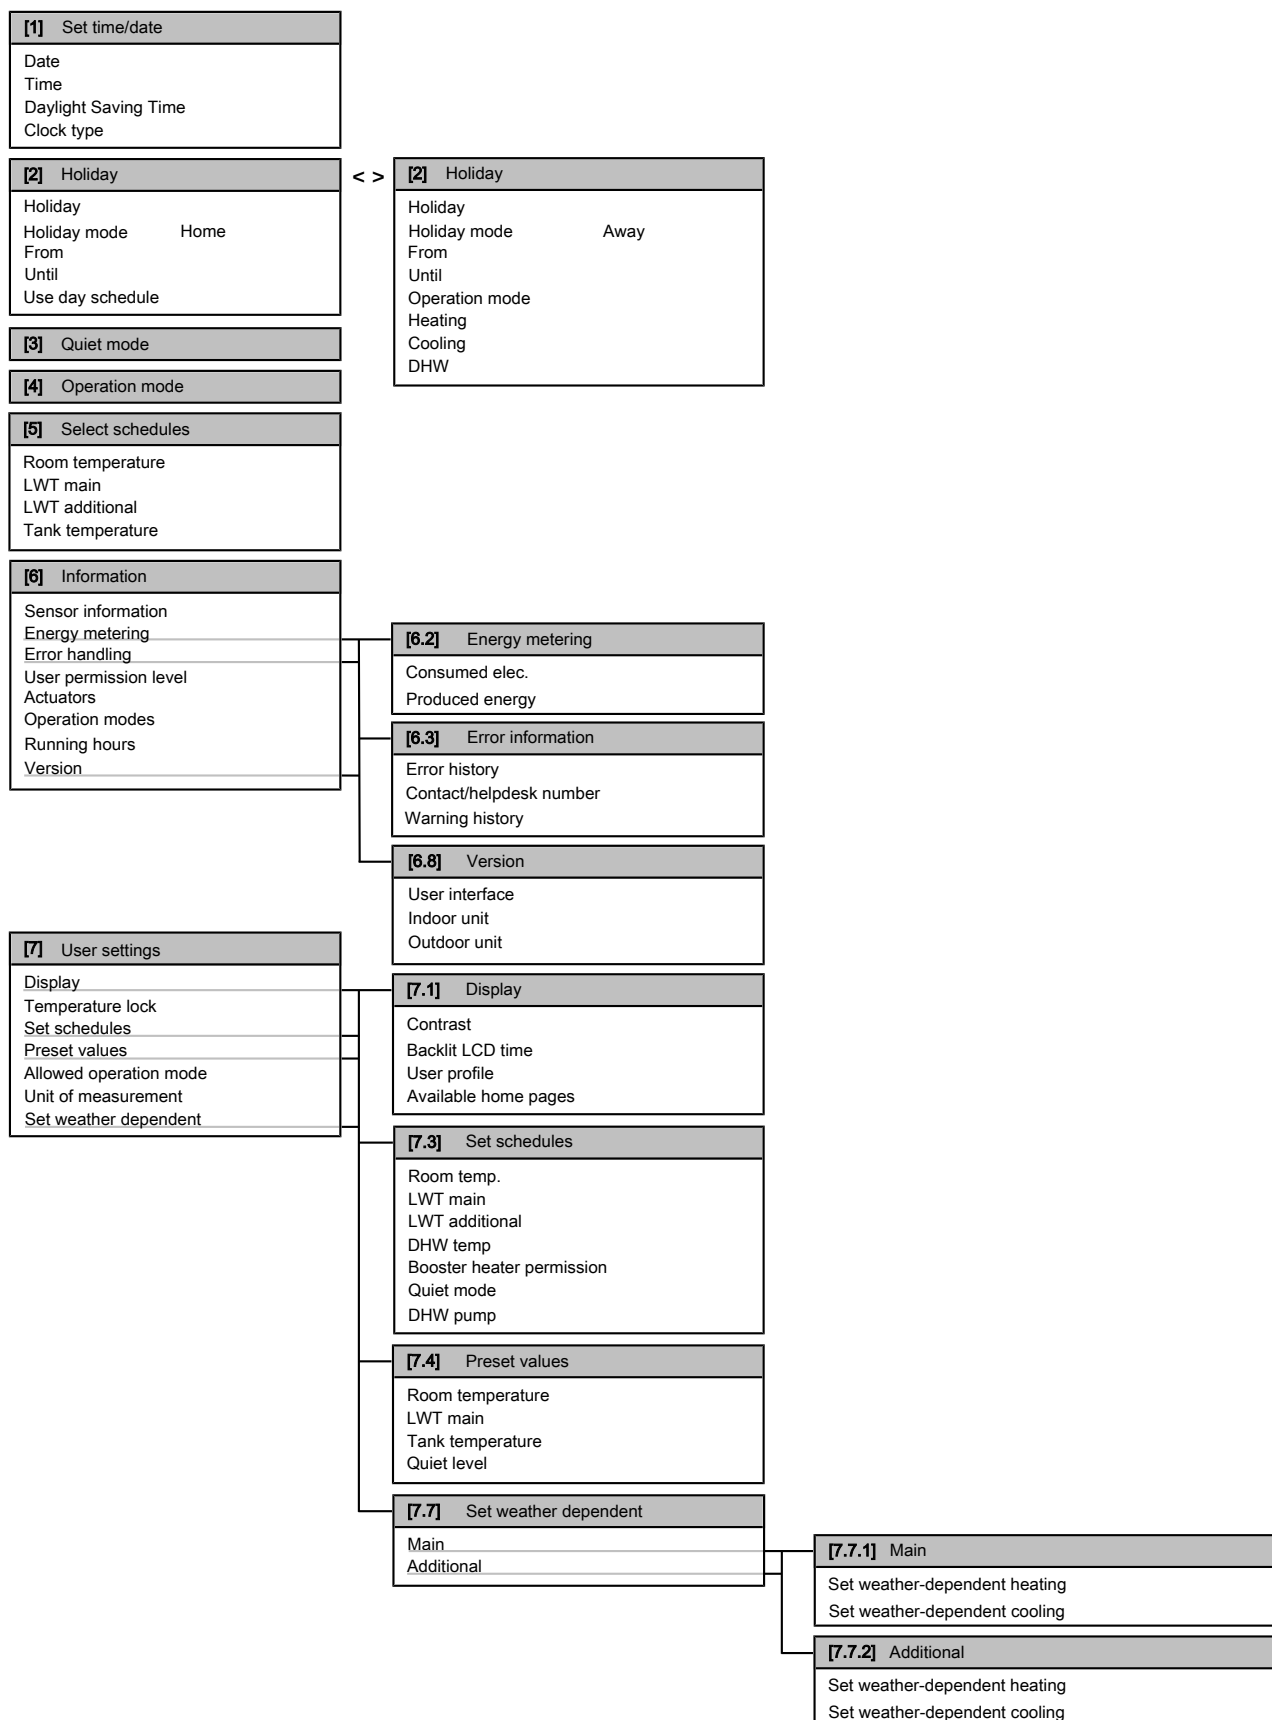

INFORMATION

Depending on the selected installer settings, settings will be visible/invisible.

4.10 Installer settings: Tables to be filled in by installer

4.10.1 Quick wizard

Setting	Default	Fill in...
Backup heater configuration (only for unified backup heater) [A.2.1.5]		
BUH type	1 (1P,(1/2))	
Forced off contact [A.2.1.6]		
Forced off contact	0 (No)	
Space heating/cooling settings [A.2.1]		
Unit control method	2 (RT control)	
User interface location	1 (In room)	
Number of LWT zones	1 (1 LWT zone)	
Pump operation mode	1 (Sample)	
Domestic hot water settings [A.2.2]		
DHW operation	Depends on model	
DHW tank type	Depends on model	
DHW pump	0 (No)	
Thermostats [A.2.2]		
Contact type main	2 (Thermo ON/OFF)	
Contact type add.	2 (Thermo ON/OFF)	
External sensor	0 (No)	
Digital I/O PCB [A.2.2.6]		
Ext. backup heat src	0 (No)	
Solar kit	0 (No)	
Alarm output	0 (Normally open)	
Bottom plate heater	0 (No)	
Demand PCB [A.2.2.7]		
Demand PCB	0 (No)	
Energy metering [A.2.2]		
External kWh meter 1	0 (No)	
External kWh meter 2	0 (No)	
Capacities (energy metering) [A.2.3]		
Booster heater	0 kW	
BUH: step 1	Depends on model	
BUH: step 2	Depends on model	
Bottom plate heater	0 W	

4.10.2 Space heating/cooling control

Setting	Default	Fill in...
Leaving water temperature: Main zone [A.3.1.1]		
LWT setpoint mode	1 (WD)	
Leaving water temperature: Additional zone [A.3.1.2]		
LWT setpoint mode	1 (WD)	
Leaving water temperature: Delta T source [A.3.1.3]		
Heating	5°C	
Cooling	5°C	
Leaving water temperature: Modulation [A.3.1.1.5]		
Modulated LWT	0 (No)	

Setting	Default	Fill in...
Leaving water temperature: Emitter type [A.3.1.1.7]		
Emitter type	1 (Slow)	

4.10.3 Domestic hot water control [A.4]

Setting	Default	Fill in...
Type	2 (Scheduled only)	
Maximum setpoint	Depends on model	



INFORMATION

There is a risk of space heating (cooling) capacity shortage/comfort problem (in case of frequent domestic hot water operation, frequent and long space heating/cooling interruption will happen) when selecting [6-0D]=0 ([A.4.1] Domestic hot water Type=Reheat only) in case of a domestic hot water tank without an internal booster heater.



INFORMATION

When the DHW tank booster mode is active, the risk of space heating/cooling and capacity shortage comfort problems is significant. In case of frequent domestic hot water operation, frequent and long space heating/cooling interruptions will happen.

4.10.4 Contact/helpdesk number [6.3.2]

Setting	Default	Fill in...
Contact/helpdesk number	—	

5 Setting the energy prices

If your system's savings mode is set to Economical, it allows you to set:

- a fixed fuel price
- 3 electricity price levels
- a weekly schedule timer for electricity prices.

The savings mode is set by the installer and can be either ecological or economical. In ecological mode, the primary energy use is minimised; in economical mode, the running costs. Discuss with the installer which savings mode is preferred. Refer to the installation manual for more information.

Example: How to set the energy prices on the user interface?

Price	Value in breadcrumb
Fuel: 5.3 euro cent/kWh	[7.4.6]=5.3
Fuel: 4.8 pence/kWh	[7.4.6]=4.8
Electricity: 12 euro cent/kWh	[7.4.5.1]=12
Electricity: 12.49 pence/kWh	[7.4.5.1]=12

5.1 To set the fuel price

- 1 Go to [7.4.6]: > User settings > Preset values > Fuel price.
- 2 Use and to set the correct price.
- 3 Press to confirm.

6 Energy saving tips



INFORMATION

- Price value ranging from 0.00~290 valuta/MBtu (with 2 significant values).
- Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).

5.2 To set the electricity price

- Go to [7.4.5]: > User settings > Preset values > Elec price.
- Use and to set the correct prices for High, Medium and Low, according to your electricity tariff.
- Press **OK** to confirm.



INFORMATION

Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).



INFORMATION

If no schedule is set, the Elec price for High is taken into account.

5.3 To set the electricity price schedule timer

- Go to [7.3.8]: > User settings > Set schedules > Elec price.
- Program the schedule according to the High, Medium and Low electricity prices for each time interval.
- Press **OK** to save the schedule.



INFORMATION

The values for High, Medium and Low correspond with the electricity price values for High, Medium and Low previously set. If no schedule is set, the electricity price for High is taken into account.

5.4 About energy prices in case of an incentive per kWh renewable energy

An incentive can be taken into account when setting the energy prices. Although the running cost can increase, the total operation cost, taking into account the reimbursement will be optimized.



NOTICE

Make sure to modify the setting of the energy prices at the end of the incentive period.

5.4.1 To set the fuel price in case of an incentive per kWh renewable energy

Prerequisite: Calculate the value for the fuel price with the following formula: actual fuel price+(incentive/kWh×0.9)

- Go to [7.4.6]: > User settings > Preset values > Fuel price.
- Use and to set the correct price.
- Press **OK** to confirm.

5.4.2 To set the electricity price in case of an incentive per kWh renewable energy

Prerequisite: Calculate the value for the electricity price with following formula: actual electricity price+incentive/kWh.

- Go to [7.4.5]: > User settings > Preset values > Elec price.
- Use and to set the correct prices for High, Medium and Low, according to your electricity tariff.

- Press **OK** to confirm.

5.4.3 Example

This is an example and the prices and/or values used in this example are NOT accurate.

Data	Pence/kWh
Fuel price	4.08
Electricity price	12.49
Renewable heat incentive per kWh	5

Calculation of the fuel price:

Fuel price=Actual fuel price+(incentive/kWh×0.9)

Fuel price=4.08+(5×0.9)

Fuel price=8.58

Calculation of the electricity price:

Electricity price=Actual electricity price+incentive/kWh

Electricity price=12.49+5

Electricity price=17.49

Price	Value in breadcrumb
Fuel: 4.08 pence/kWh	[7.4.6]=8.58
Electricity: 12.49 pence/kWh	[7.4.5]=17.49

6 Energy saving tips

Tips about room temperature

- Make sure the desired room temperature is NEVER too high (in heating mode) or too low (in cooling mode), but ALWAYS according to your actual needs. Each saved degree can save up to 6% of heating/cooling costs.
- Do NOT increase the desired room temperature to speed up space heating. The space will NOT heat up faster.
- When your system layout contains slow heat emitters (example: under floor heating), avoid large fluctuation of the desired room temperature and do NOT let the room temperature drop too low. It will take more time and energy to heat up the room again.
- Use a weekly schedule for your normal space heating or cooling needs. If necessary, you can easily deviate from the schedule:
 - For shorter periods: You can overrule the scheduled room temperature. **Example:** When you have a party, or when you are leaving for a couple of hours.
 - For longer periods: You can use the holiday mode. **Example:** When you stay at home during your holiday, or when you go away during your holiday.

Tips about leaving water temperature

- In heating mode, a lower desired leaving water temperature results in lower energy consumption and better performance. In cooling, the opposite is valid.
- Set the desired leaving water temperature in accordance with the heat emitter type. **Example:** Underfloor heating is designed for lower leaving water temperature than radiators and heat pump convectors.

Tips about DHW tank temperature

- Use a weekly schedule for your normal domestic hot water needs (only in scheduled mode).
 - Program to heat up the DHW tank to a preset value (Storage comfort = higher DHW tank temperature) during the night, because then space heating demand is lower.
 - If heating up the DHW tank once at night is not sufficient, program to additionally heat up the DHW tank to a preset value (Storage eco = lower DHW tank temperature) during the day.
- Make sure the desired DHW tank temperature is NOT too high. **Example:** After installation, lower the DHW tank temperature daily by 1°C and check if you still have enough hot water.
- Program to turn ON the domestic hot water pump only during periods of the day when instant hot water is necessary. **Example:** In the morning and evening.

7 Maintenance and service

7.1 Overview: Maintenance and service

The installer has to perform a yearly maintenance. You can find the contact/helpdesk number via the user interface.

As end user, you have to:

- Keep the area around the unit clean.
- Keep the user interface clean with a soft damp cloth. Do NOT use any detergents.
- Regularly check if the water pressure indicated on the manometer is above 1 bar.

Refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R410A

Global warming potential (GWP) value: 2087.5

**NOTICE**

In Europe, the **greenhouse gas emissions** of the total refrigerant charge in the system (expressed as tonnes CO₂-equivalent) is used to determine the maintenance intervals. Follow the applicable legislation.

Formula to calculate the greenhouse gas emissions:
GWP value of the refrigerant × Total refrigerant charge [in kg] / 1000

Please contact your installer for more information.

**WARNING**

The refrigerant in the system is safe and normally does not leak. If the refrigerant leaks in the room, contact with a fire of a burner, a heater or a cooker may result in a harmful gas.

Turn off any combustible heating devices, ventilate the room and contact the dealer where you purchased the unit.

Do not use the system until a service person confirms that the portion where the refrigerant leaks is repaired.

7.2 To find the contact/helpdesk number

Prerequisite: You switched the permission level to Advanced end user.

- Go to [6.3.2]: > Information > Error handling > Contact/helpdesk number.

8 Troubleshooting

8.1 Overview: Troubleshooting

If a malfunction occurs, is displayed on the home pages. You can press to display more information about the malfunction.

For the symptoms listed below, you can try to solve the problem yourself. For any other problem, contact your installer. You can find the contact/helpdesk number via the user interface.

8.2 To check the error history

Prerequisite: Only available if is displayed on the home pages.

- Go to [6.3.1]: > Information > Error handling > Error history.

8.3 To check the warning history

Prerequisite: Only available if is displayed on the home pages.

- Go to [6.3.1]: > Information > Error handling > Warning history.

8.4 Symptom: You are feeling too cold (hot) in your living room

Possible cause	Corrective action
The desired room temperature is too low (high).	Increase (decrease) the desired room temperature. If the problem recurs daily, do one of the following: <ul style="list-style-type: none"> Increase (decrease) the room temperature preset value. Adjust the room temperature schedule.
The desired room temperature cannot be reached.	Increase the desired leaving water temperature in accordance with the heat emitter type.

9 Relocation

8.5 Symptom: The water at the tap is too cold

Possible cause	Corrective action
You ran out of domestic hot water because of unusual high consumption.	If you immediately need domestic hot water, activate the DHW tank booster mode. However, this consumes extra energy. If you can wait, overrule (increase) the active or next scheduled desired temperature so that more hot water will be produced exceptionally. If the problems recurs daily, do one of the following: <ul style="list-style-type: none">▪ Increase the DHW tank temperature preset value.▪ Adjust the DHW tank temperature schedule. Example: Program to additionally heat up the DHW tank to a preset value (Storage eco = lower tank temperature) during the day.
The desired DHW tank temperature is too low.	

- When auto emergency is **activated** and a heat pump failure occurs:
 - The backup heater will automatically take over the heat load.
 - The booster heater will automatically take over the domestic hot water production.
- When auto emergency is **not activated** and a heat pump failure occurs, the domestic hot water and space heating operations will stop and need to be recovered manually. The user interface will then ask you to confirm whether the backup heater or booster heater can take over the heat load or not.

When the heat pump fails, ① will appear on the user interface.

Possible cause	Corrective action
Heat pump is damaged.	<ul style="list-style-type: none">▪ Press ⓘ to view a description of the problem.▪ Press ⓘ again.▪ Select OK to allow the backup heater to take over the heat load.▪ Call your local dealer to get the heat pump fixed.



INFORMATION

When the backup heater or booster heater takes over the heat load, electricity consumption will be considerably higher.

8.6 Symptom: Heat pump failure

Only for EHVH/X:

When the heat pump fails to operate, the backup heater can serve as an emergency heater and either automatically or non-automatically take over the heat load.

- When auto emergency is **activated** and a heat pump failure occurs, the backup heater will automatically take over the heat load.
- When auto emergency is **not activated** and a heat pump failure occurs, the domestic hot water and space heating operations will stop and need to be recovered manually. The user interface will then ask you to confirm whether the backup heater can take over the heat load or not.

When the heat pump fails, ① will appear on the user interface.

Possible cause	Corrective action
Heat pump is damaged.	<ul style="list-style-type: none">▪ Press ⓘ to view a description of the problem.▪ Press ⓘ again.▪ Select OK to allow the backup heater to take over the heat load.▪ Call your local dealer to get the heat pump fixed.



INFORMATION

When the backup heater takes over the heat load, electricity consumption will be considerably higher.

Only for EHBH/X:

When the heat pump fails to operate, the backup heater and booster heater can serve as an emergency heater and either automatically or non-automatically take over the heat load.

9 Relocation

9.1 Overview: Relocation

If you want to relocate parts of your system (user interface, indoor unit, outdoor unit, DHW tank...), contact your installer. You can find the contact/helpdesk number via the user interface.

10 Disposal



NOTICE

Do not try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, oil and other parts must comply with applicable legislation. Units must be treated at a specialised treatment facility for reuse, recycling and recovery.

11 Glossary

DHW = Domestic hot water

Hot water used, in any type of building, for domestic purposes.

LWT = Leaving water temperature

Water temperature at the water outlet of the heat pump.

Dealer

Sales distributor for the product.

Authorized installer

Technical skilled person who is qualified to install the product.

User

Person who is owner of the product and/or operates the product.

Applicable legislation

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

Service company

Qualified company which can perform or coordinate the required service to the product.

Installation manual

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

Operation manual

Instruction manual specified for a certain product or application, explaining how to operate it.

Accessories



Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.



Optional equipment

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

Field supply

Equipment not made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

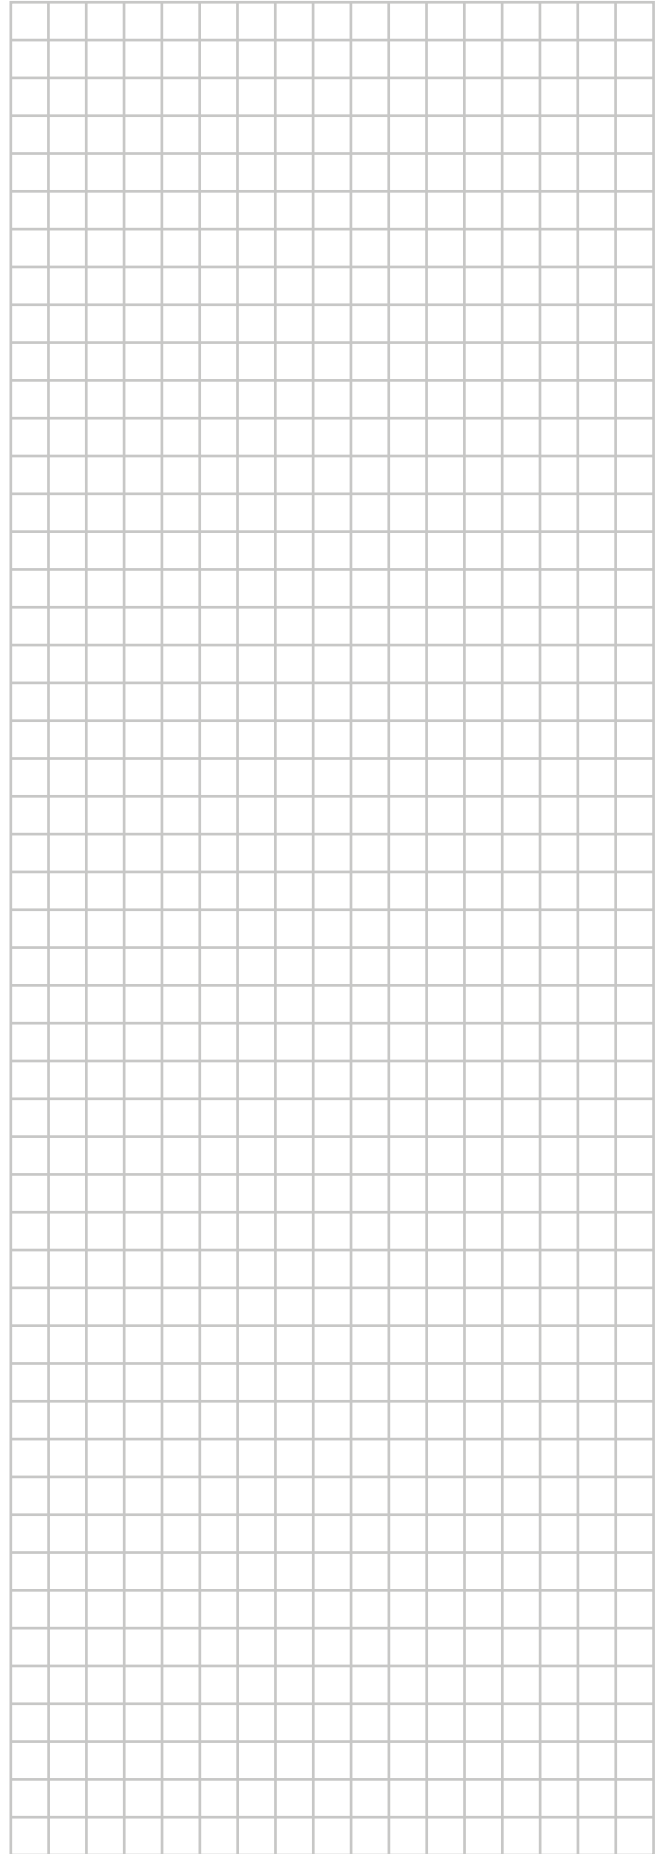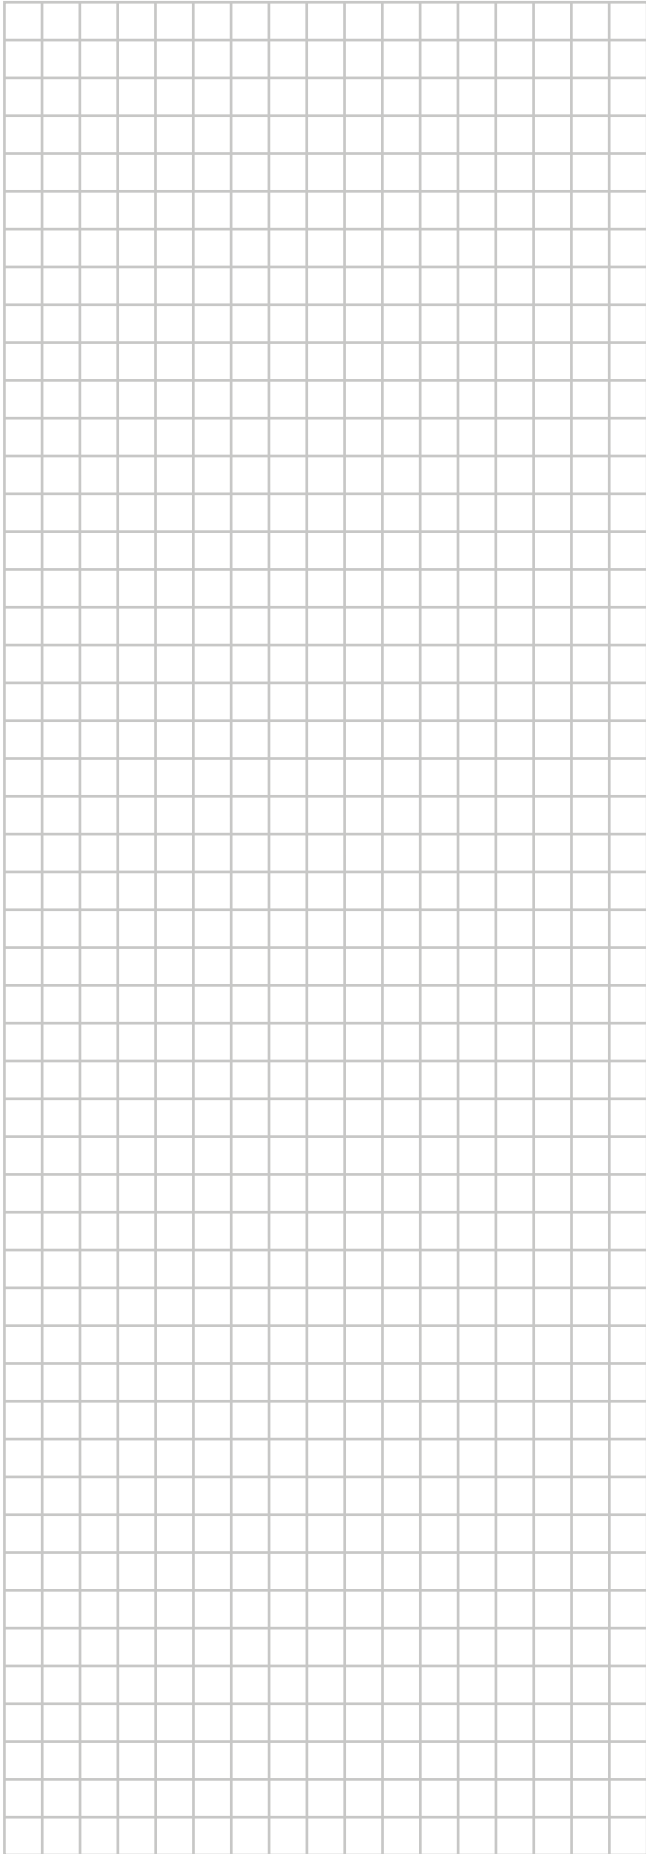

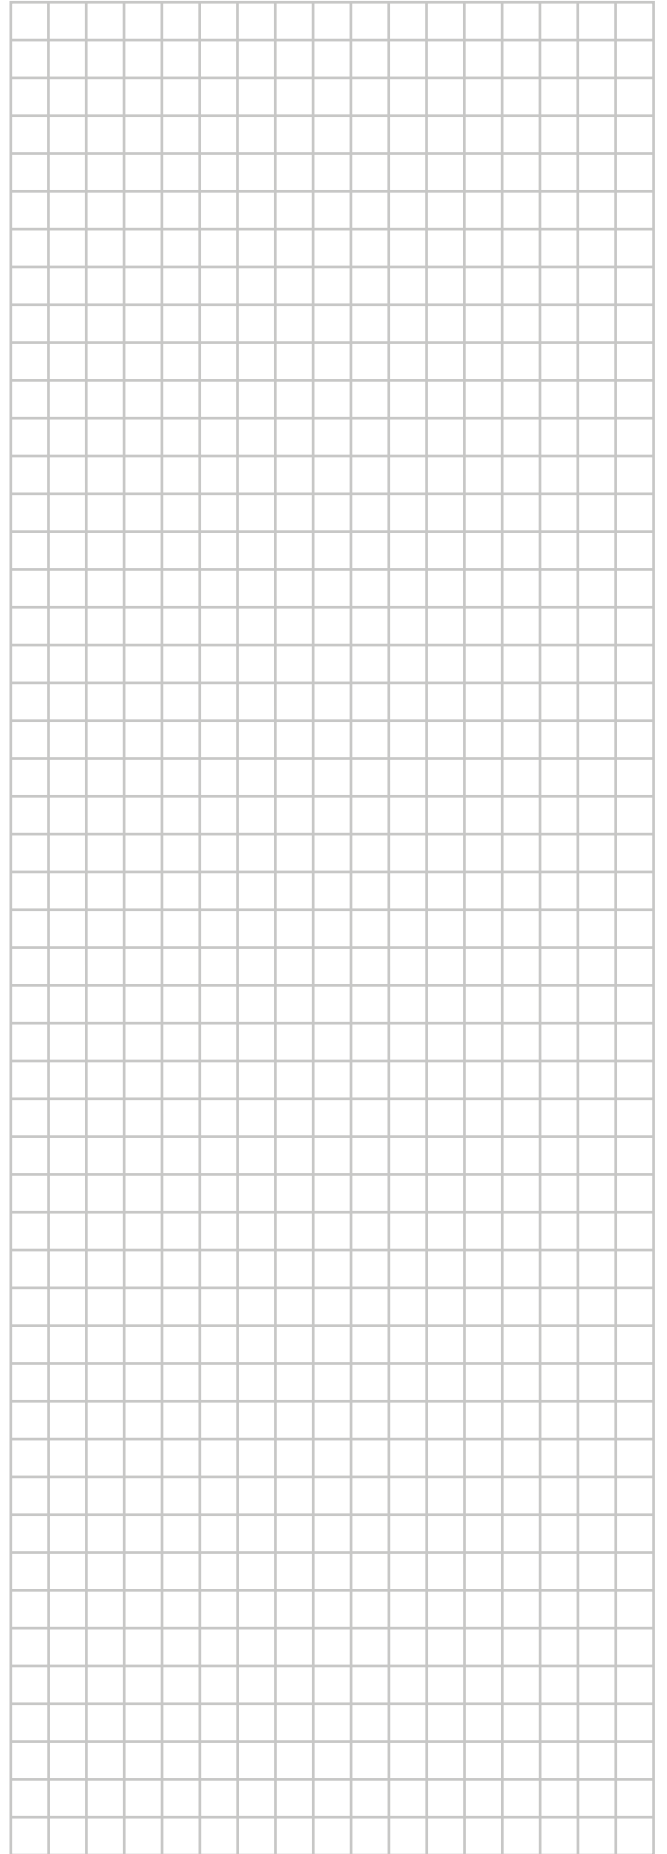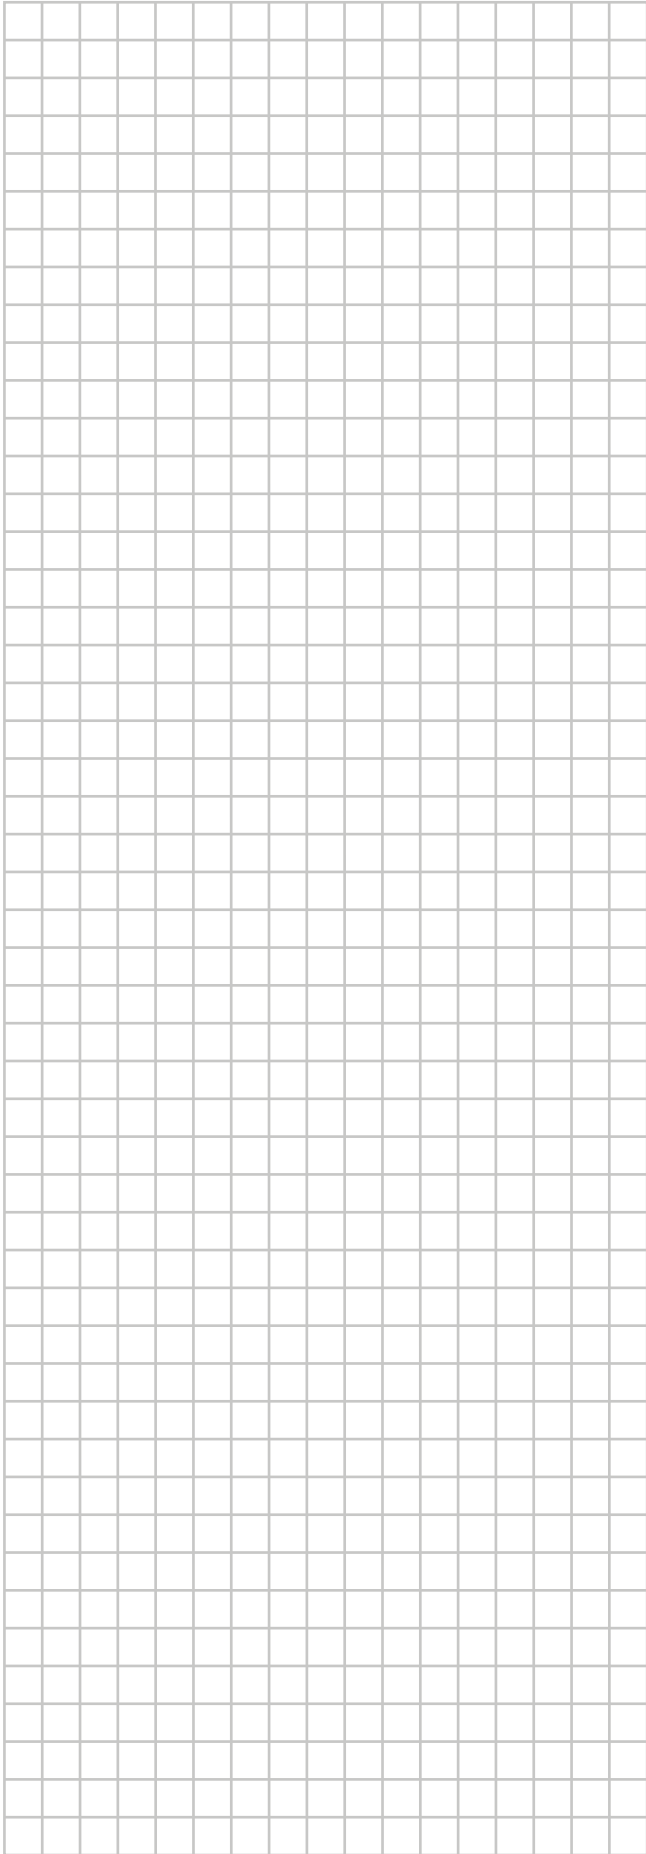

ERC

Copyright 2015 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P384964-1A 2017.04